

AKAI

Soundbox with iPod docking

ASB17I



User manual

GB 2

Gebruiksaanwijzing

NL 20

Manuel de l'utilisateur

FR 38

Manual de instrucciones

ES 56

Gebrauchsanleitung

DE 74

Οδηγίες χρήσεως

EL 92

Brugsanvisning

DA 110

Table of contents

1.	Safety	3
1.1	Intended use	3
1.2	Labels in this manual	3
1.3	General safety instructions	3
2.	Preparations for use	4
2.1	Unpacking	4
2.2	Package contents	4
3.	Installation	5
3.1	Connecting random equipment	5
3.2	Connecting to the mains	6
3.3	Battery backup	6
3.4	Remote control	7
4.	Functions	8
4.1	iPod Music System	8
5.	Operation	11
5.1	Quick start	11
5.2	iPod functions	12
5.3	Radio functions	13
5.4	Clock functions	13
5.5	Setting the SLEEP function	15
5.6	Alarm function	15
5.7	Resetting the appliance	16
6.	Cleaning and maintenance	16
7.	Troubleshooting	17
8.	Technical data	18
9.	Disposal of used electrical and electronic equipment	19

Copyright notice

Design and specifications are subject to change without notice.

1. Safety

1.1 Intended use

The iPod Music System functions as a docking station to play music from an iPod. The appliance also plays music from radio. The clock function includes an alarm and sleep program. Read the manual carefully before first use.

1.2 Labels in this manual



WARNING

A warning means that injury or death is possible if the instructions are not obeyed.



CAUTION

A caution means that damage to the equipment is possible.



A note gives additional information, e.g. for a procedure.

1.3 General safety instructions



WARNING

Do not put force on the appliance. The appliance can fall and can cause serious injury.



CAUTION

Do not spill any liquid on the appliance.



WARNING

Do not insert any objects in the ventilation holes.



CAUTION

Do not block the ventilation holes.



This appliance is double insulated; therefore no earth wire is required. Always check that the mains voltage corresponds to the voltage on the rating plate.

2. Preparations for use

2.1 Unpacking

- Unpack the appliance carefully.
- Check the package contents as described below. If any item is missing, please contact your reseller.
- Remove the labels from the front panel carefully if present.



We recommend that you retain the original carton and packing materials in case it ever becomes necessary to return your product for service. This is the only way to safely protect the product against damage in transit. If you do dispose of the carton and the packing materials, please remember to recycle with due care to the environment.

2.2 Package contents

The following items are included in the received package:

- 1 iPod Music System
- 1 Remote control
- 1 Battery cell (CR2025)
- 1 Operator manual



If any item is missing, please contact your reseller.

3. Installation

- Put the appliance on a horizontal flat surface.
- Connect the random equipment to the appliance.
Read the paragraph "Connecting random equipment".
- Connect the appliance to the mains.
- Install the batteries in the remote control.
Read the paragraph "Remote control".



CAUTION

- Do not put the appliance near a heat source.
- Do not expose the appliance to direct sunlight.




This appliance is equipped with rubber feet to prevent it from moving. The feet are made from non-migrating material specially formulated to avoid leaving any marks or stains on furniture. However, certain types of furniture polishes, wood preservatives or cleaning sprays cause the rubber to soften and leave marks or a residue on the furniture, and potentially risk the surface to become damaged. To prevent damage to wooden surfaces, we recommend that you apply self-adhesive pads to the bottom of the rubber feet before installation.

3.1 Connecting random equipment

Audio connections (input)


These connections allow you to receive audio signal from a connected CD/DVD player or amplifier.

- Insert a suitable cable into the AUX IN connection.

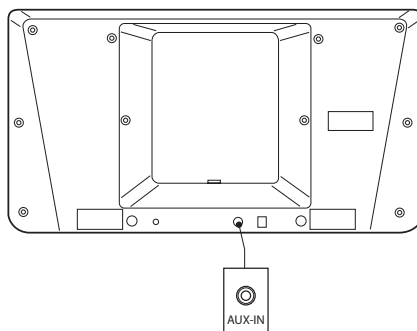


3.2 Connecting to the mains

- Connect the adaptor plug on the adaptor cable to the DC 12 V input connection.
- Connect the mains plug to a wall socket.

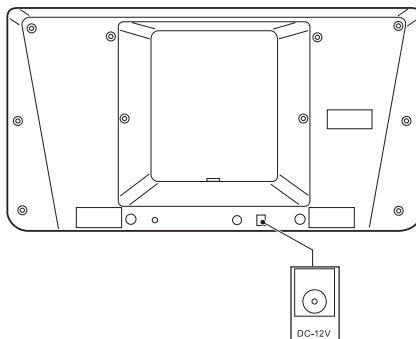

3.3 Battery backup

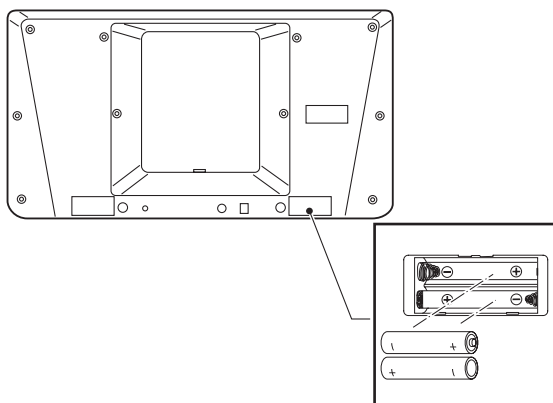

In case of a power failure, the appliance relies on battery backup. For this purpose, the appliance uses two batteries (size AAA). The appliance remembers the time, but does not display it.



- Batteries are not included with this appliance.
- Batteries are not necessary for normal operation.

Installing the batteries

The batteries for the game pad are not supplied with the appliance.

- Remove the battery cover.
- Insert the batteries matching the (+) and (-) polarity markings.
- Re-install the battery cover.




CAUTION

Incorrect installation can cause battery leakage and corrosion which will damage the appliance. Corrosion, oxidation, battery leakage and any other gradually acidic defect of this nature will invalidate the guarantee.

3.4 Remote control

Installing the battery


- Press the catch and at the same time pull out the battery tray.
- Insert 1 lithium battery, type CR2025 3V battery with the stamped (+) mark facing upward.
- Insert the battery tray into the remote control.

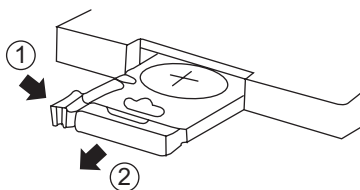

4. Functions


4.1 iPod Music System

- 1 STANDBY button
- 2 STOP button
- 3 PLAY/PAUSE/SCAN button
- 4 Docking station
- 5 Display
- 6 Remote control sensor
- 7 VOL+ button
- 8 VOL- button
- 9 REPEAT button
- 10 RAN/ST button
- 11 EQ button
- 12 MEM/SET button
- 13 FUNC button
- 14 SKIP UP button
- 15 SKIP DOWN button

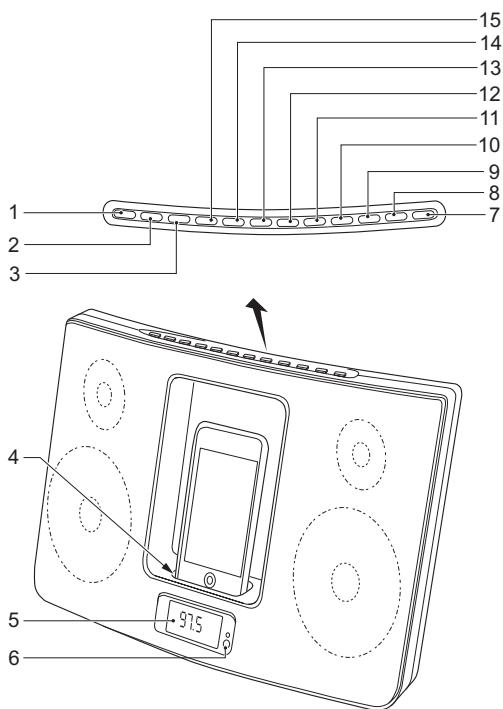


Display

- 16 AUX mode indicator
- 17 iPod mode indicator
- 18 RADIO mode indicator
- 19 FM indicator
- 20 Alarm mode indicator: iPod
- 21 Alarm mode indicator: Radio
- 22 Alarm mode indicator: Tone
- 23 AL1 indicator
- 24 AL2 indicator
- 25 SNOOZE indicator
- 26 SLEEP indicator

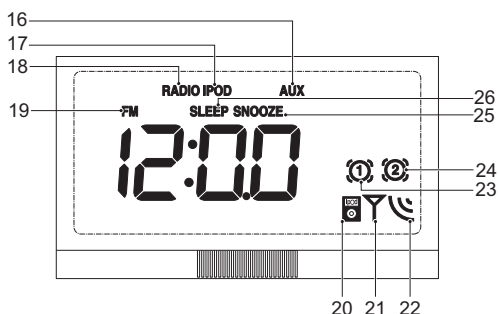


Back panel

- 27 RESET button

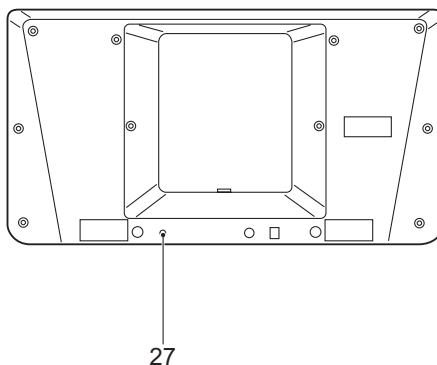

Remote control

- 28 STANDBY button
- 29 Digit buttons (0-9)
- 30 RAN/ST button
- 31 MEM/SET button
- 32 PREV button
- 33 NEXT button
- 34 FUNC button
- 35 ENT button
- 36 PLAY/PAUSE/SCAN button
- 37 STOP button
- 38 MENU button
- 39 EQ button
- 40 V- button
- 41 V+ button
- 42 M+ button
- 43 M- button
- 44 XBASS button
- 45 REPEAT button
- 46 SLEEP button
- 47 INPUT button
- 48 MUTE button
- 49 AL2 button
- 50 AL1 button

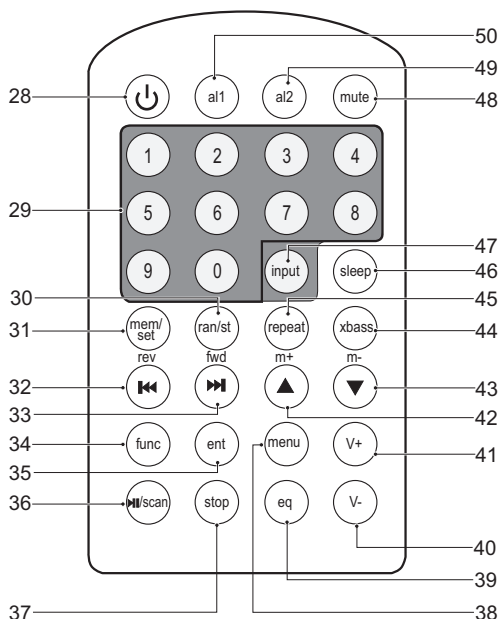

The M+ button, the M- button, the PREV button and the NEXT button function as arrow buttons for navigation in the iPod menus.

5. Operation

All functions of the appliance are accessible using the remote control. All instructions refer to operation with the remote control, unless indicated otherwise.

5.1 Quick start

General functions

- To switch on the appliance, press the STANDBY button (28). To switch off the appliance, press the STANDBY button (28) again.
- To select the source mode (RADIO, iPod, AUX), press the FUNC button (34).
- To adjust the volume, press the V+ button (41) or the V- button (40).
- To enable the sound mode (ROCK, CLASSIC, JAZZ, POP), press the EQ button (39). To disable the sound mode, select FLAT.
- To enable the enhanced bass, press the XBASS button (44). To disable the enhanced bass, press the XBASS button (44) again.
- To mute or restore sound, press the MUTE button (48).

iPod functions

- Select the matching dock adaptor for your iPod. Insert the dock adaptor in the docking station (4). Place the iPod on the dock adaptor.
- Switch on the appliance. Select the iPod mode.
- To start playback, press the PLAY/PAUSE/SCAN button (36) once.
- For extended instructions, read the paragraph "iPod functions" further on in this manual.

Radio functions

- Switch on the appliance. Select the tuner mode.
- To quickly install the station list: Press and hold the PLAY/PAUSE/SCAN button (36) for 2 seconds to start the search program that sets the available channels automatically.
- For extended instructions, read the paragraph "Radio functions" further on in this manual.

Clock functions

- Read the paragraph "Clock functions" further on in this manual.

5.2 iPod functions

Installing and removing an iPod

- To install an iPod:
 - Choose the correct dock adaptor.
 - Insert the dock adaptor into the dock.
 - Insert the iPod into the dock adaptor.
- To remove an iPod:
 - Pull the iPod gently out of the dock adaptor.
 - To remove dock adaptor, pull the dock adaptor gently out of the appliance.



CAUTION

When connecting an iPod, ensure that the correct dock adaptor is placed.



Whilst the iPod is docked in the system, its battery is charged automatically. When the battery is fully charged, the charging process is completed.

Audio playback

During playback, the following functions are available:

- To select a track, press the PREV button (32) or the NEXT button (33) until the desired track is set.
- To forward or rewind the track, press and hold the PREV button (32) or the NEXT button (33).
- To pause playback, press the PLAY/PAUSE/SCAN button (36) once. To resume playback, press the PLAY/PAUSE/SCAN button (36) again.

In order to operate the following functions, the iPod must be unlocked.

- To select a playlist, press the MENU button (38).
- To enter the iPod menu, press the MENU button (38).
- To enter and navigate through the menu:
 - Press the M+ button (42) or the M- button (43) to select a submenu.
 - Press the ENT button (35) to select a setting.



- In order to operate the REPEAT or RAN/ST function, the iPod has to support these functions.
- In order to operate the PLAYLIST or MENU function, the iPod has to support these functions.

5.3 Radio functions

- To select a preset radio station, press the M+ button (42) and the M- button (43) to zap through the list.
- To search for a specific frequency, press the PREV button (32) or the NEXT button (33) repeatedly until the desired frequency is set.
- To search automatically, press and hold the PREV button (32) or the NEXT button (33). The appliance searches for the next available station.
- To improve the reception of the FM frequency, press the RAN/ST button (30).

Programming radio stations

Per radio band (FM), 30 radio stations can be preset.

- Press the PREV button (32) or the NEXT button (33) repeatedly until the desired frequency is set.
- Press the MEM/SET button (31).
- Press the PREV button (32) or the NEXT button (33) to select the preset memory number.
- Press the MEM/SET button (31) to confirm.

5.4 Clock functions

With the clock function, the following parameters can be set:

- current time
- alarm time (incl. alarm mode, snooze time)

Setting the current time

The current time can only be set in standby mode.

- Press and hold the MEM/SET button (31). The hour digits start flashing.
- Press the PREV button (32) or the NEXT button (33) to set the desired hour.

- Press the MEM/SET button (31) to confirm. The minute digits start flashing.
- Press the PREV button (32) or the NEXT button (33) to set the desired minutes.
- Press the MEM/SET button (31) to confirm.

Setting the alarm time

The alarm time can only be set in standby mode. Two time slots are available (ALARM1 and ALARM2).

To set ALARM1:

- Press and hold the AL1 button (50). The AL1 indicator (23) appears on the display. The hour digits start flashing.
- To set the correct hour, press the PREV button (32) or the NEXT button (33).
- To confirm the setting, press the AL1 button (50). The minute digits start flashing.
- To set the correct minutes, press the PREV button (32) or the NEXT button (33).
- To confirm the setting, press the AL1 button (50).

To set ALARM2:

- Press and hold the AL2 button (49). The AL2 indicator (24) appears on the display. The hour digits start flashing.
- To set the correct hour, press the PREV button (32) or the NEXT button (33).
- To confirm the setting, press the AL2 button (49). The minute digits start flashing.
- To set the correct minutes, press the PREV button (32) or the NEXT button (33).
- To confirm the setting, press the AL2 button (49).



During a power failure, or when unplugging the appliance, the time settings are lost, unless backup batteries are installed.

5.5 Setting the SLEEP function

- If the source is iPOD, install the source device.
- If the source is the radio, select the desired radio station.
- Press the SLEEP button (46) until the SLEEP indicator (26) flashes on the display. The sleep time appears on the display.
- Press the SLEEP button (46) repeatedly until the desired setting is found (10, 20 ... 90 min). The SLEEP indicator (26) is ON.
- Press the ENT button (35) to confirm.

The appliance stops playing after the chosen time has elapsed.

- To cancel the SLEEP function, press the SLEEP button (46).

5.6 Alarm function

To activate ALARM1:

- To select the tone alarm mode, press the AL1 button (50) once. The alarm indicator (23) and the corresponding alarm mode indicator (22) are ON.
- To select the radio alarm mode, press the AL1 button (50) once again. The alarm indicator (23) and the corresponding alarm mode indicator (21) are ON.
- To select the iPod alarm mode, press the AL1 button (50) once again. The alarm indicator (23) and the corresponding alarm mode indicator (20) are ON.
- To cancel the alarm, press the AL1 button (50) once again.

To activate ALARM2:

- To select the tone alarm mode, press the AL2 button (49) once. The alarm indicator (24) and the corresponding alarm mode indicator (22) are ON.
- To select the radio alarm mode, press the AL2 button (49) once again. The alarm indicator (24) and the corresponding alarm mode indicator (21) are ON.
- To select the iPod alarm mode, press the AL2 button (49) once again. The alarm indicator (24) and the corresponding alarm mode indicator (20) are ON.
- To cancel the alarm, press the AL2 button (49) once again.

Snooze alarm

The default snooze time is: +/- 6 minutes.

- To snooze the alarm, press any button except the STANDBY button (28). The alarm sounds again after the snooze time has elapsed.
- To stop the alarm, press the STANDBY button (28).

5.7 Resetting the appliance

- To restore the default settings of the appliance, press the RESET button (27) using a pointed object.

6. Cleaning and maintenance



WARNING

Before performing any cleaning or maintenance, switch off and unplug the appliance.

- Clean the outside of the appliance with a soft cloth. When the appliance is very dirty, dampen the cloth slightly with water and a neutral solution.

7. Troubleshooting

Trouble	Action
No sound or incomplete audio	Check if the correct source is selected. Check volume or mute setting. Check if the random equipment are switched on and set correctly. Check cables for connection problems.
No power	Check if the power cord has been properly connected to the power outlet.
The operation keys do not work	Internal error. Reset the appliance.

Radio

Trouble	Action
Noise or sound distorted on FM broadcasts	Station is not tuned properly. Adjust tuning control. Wire aerial is not positioned correctly. Extend the aerial.
FM stereo indicator does not light	Selected station broadcasts in mono. Extend the aerial. Station signal is too weak. Try other strong stations.

iPod

Trouble	Action
iPod volume control does not increase audio volume	iPod volume control only controls the volume output to the headphone jack. Set the unit volume control when the iPod is docked on the unit.
No response to MENU or PLAYLIST function	iPod does not support these functions.

AUX

Trouble	Action
No sound on the system	Input source is low. Increase the volume level on the unit audio source device.
No picture	Check if the TV is switched on and set to the correct A/V input. Check cables for connection problems. Check cables for damage.

8. Technical data

Parameter	Value
Voltage	12 V _{DC}
Input voltage	100 ~ 240 V _{AC} / 50 ~ 60 Hz
Backup voltage	2 x 1.5 V
Power consumption	23 W
Max. power output	2 x 6 W
Radio bands	FM
Dimensions (W x H x D)	36 x 22.2 x 9.8 cm
Weight	1.96 kg

Frequency range

Parameter	Value
FM radio	87.5 - 108 MHz

Remote control

Parameter	Value
Power consumption	3 V
Battery size	CR2025

9. Disposal of used electrical and electronic equipment



The meaning of the symbol on the material, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical and electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

For more information and warranty conditions, please visit: **www.akai.eu**